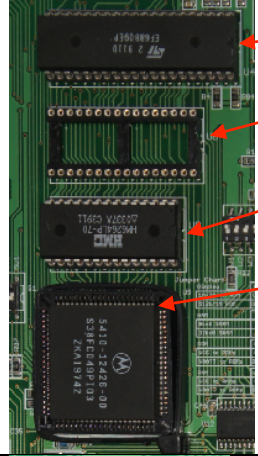


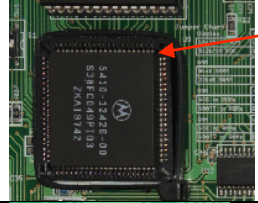
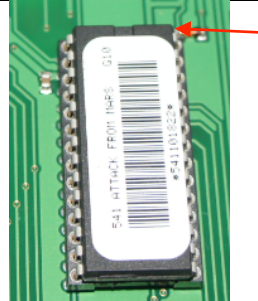


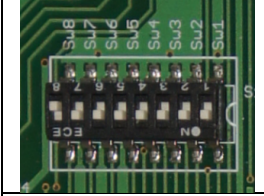
Installation guide for PinLED WPC (10036), WPC-S (10037) and WPC95 (10038) CPU boards.

This short description is for starting up the PinLED CPU board. The installation is divided into three steps:

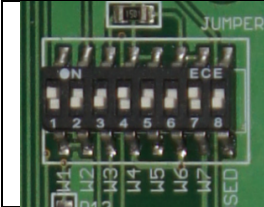
- Push in the ICs:** Please place the PinLED CPU board in front of you on a workbench. Place the original board right beside to strip the ICs. If you use new ICs just place only our board in front of you. Now you have to fit the CPU Chip, the GAME EPROM und den ASIC into the PinLED board. It is very important to line up the ICs the right way. Be careful! Otherwise the ICs will be destroyed. Pay attention also when pull in the chips into their sockets - don't bent a leg! Don't force the chips to go into the sockets!

	Pin 1	U4 the CPU Chip. The CPU chip must be placed into this socket. Please use a EF68B09EP Type. Pin 1 resp. the small notch faces to the right!
	Pin 1	U6 the EPROM Chip. The GAME EPROM must be places into this socket. Pin 1 resp. the small notch faces to the right!
	Pin 1	U8 the GAME RAM. The Game RAM is placed in this socket. A 6264LP-70 type is mounted. You don't have to consider this because it is already mounted as you got the board.
	Pin 1	U9 the ASIC. The ASIC chip must be places into this socket. Please note the small chamfered edge. This is Pin 1 of the chip. On the WPC and the WPC-S board the small chamfered edge is located at the right upper corner. On the WPC-95 board the small chamfered edge is located at the left upper corner. Press the chip carefully into the socket.
	Pin 1	G10 the Security Chip. You need a special chip to run the WPC-S and the WPC95 board. This must be placed into socket G10. Pin 1 resp. the small notch faces up!

- Setting of the DIP-switches:** There are two 8-pin dip switches located on the CPU board.
 - DIP-switch S1.** With this DIP-switch you can set the different languages. There is a print on the board that shows the settings.

	Country	Sw4	Sw5	Sw6	Sw7	Sw8
	American	ON	ON	ON	ON	ON
	European	ON	ON	OFF	ON	ON
	French	ON	ON	ON	OFF	OFF
	German	ON	ON	ON	ON	OFF
Example: Setting German	Spanish	ON	OFF	ON	ON	ON

- DIP-switch Jumper.** This DIP-switch is used to switch the different bridges on the board. On the original board the bridges were done by soldered wires to select the settings. On the PinLED CPU board a DIP-switch makes it very simple and easy. There is a stamp on the board too that shows the different settings. Normally the following setting is good in 99% of the cases.

	W1	ON
	W2	OFF
	W3	OFF
	W4	ON
	W5	OFF
	W6	OFF
Switch 1, 4 and 7 are set to ON	W7	ON
Battery on 10036 boards	W8	ON
Battery on 10037 and 10038 boards	W9	ON

- Installation of the board:** Place the PinLED board the same way into your machine as the original board. Set it on the brackets and tight the screws. Then put the ribbon cables back on. Make sure you align the plugs the right way. After you have connected all cables back again you can switch on your machine. The three red LEDs on the PinLED CPU board show the same information as the original.

Illumination of the LEDs directly after start up: LED19 on, LED20 off, LED 21 on.
 Illumination of the LEDs after app. 1 sec.: LED19 off, LED20 flashing, LED21 on.